



ADAPTOR FOOT VALVE

The Adaptor Foot Valve is manufactured with female thread and is fitted to the bottom of the Jooste Cylinder to accommodate a submersible pump or extension pipes.

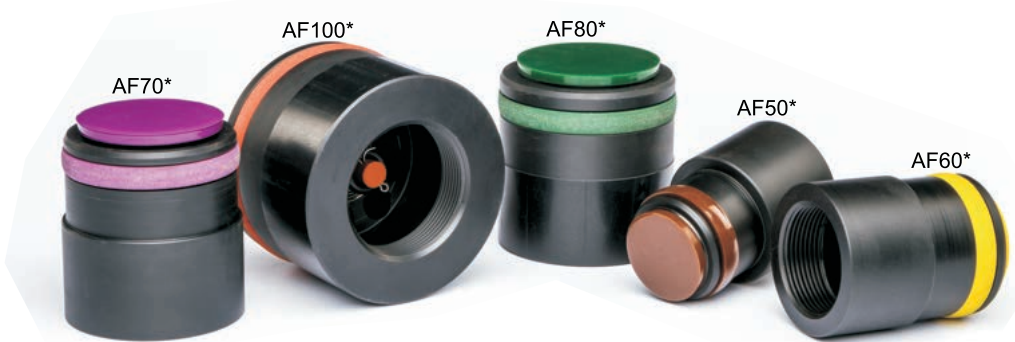

JOOSTE CYLINDER

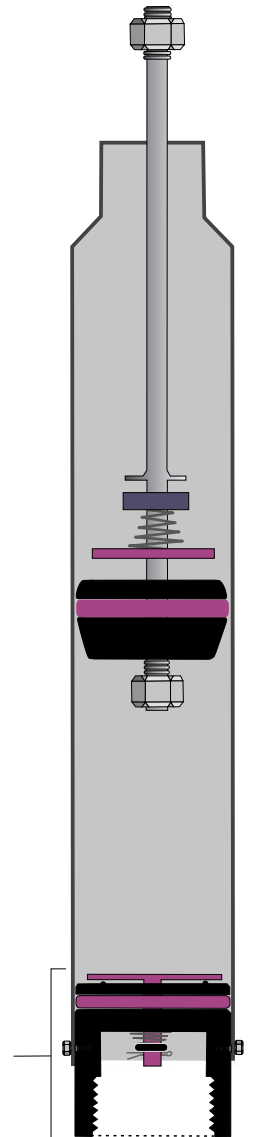

INSTALLATION INSTRUCTIONS



Step 1: Secure the cylinder and remove the nuts and bolts.



Step 2: Very important! Remove the foot valve from the cylinder.



Step 3: Fit the adaptor into the opening of the cylinder and tap the adaptor in with a hammer and a block of wood until the shoulder of the adaptor is flush with the bottom of the cylinder.



Step 4: Drill 4mm pilot holes 12mm deep through the cylinder tube holes into the adaptor.



Step 5: Fasten the self tapping screws provided with the adaptor.

ADAPTOR FOOT VALVE

